


M-T Emergency Shut Off

401549 \$ 89.95

Installation Instructions


1. Install the handle in the driver's cage by removing the handle pivot bolt. Place the clamp on the upper frame rail in a comfortable position for the driver and reassemble the clamp. Note - there are four possible handle configurations which allow push or pull operation of the handle on the left or right side of the car.
(Recommended installation is on the right side with the handle operating in the "push" position and the cable housing running forward in the car as shown in the picture. This is the easiest operation in the case of an emergency.)

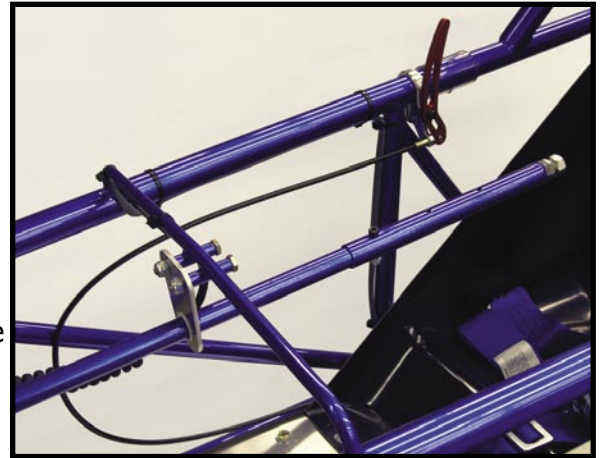

2. Route the cable and switch back to the engine leaving any excess cable looped forward in the driver's cage as shown.

COILING EXCESS CABLE WILL NOT ALLOW SWITCH TO OPERATE PROPERLY.

NOTICE: The M-T Emergency Shutoff Assembly is adjusted at the factory and should not be cut down or require further adjustment.

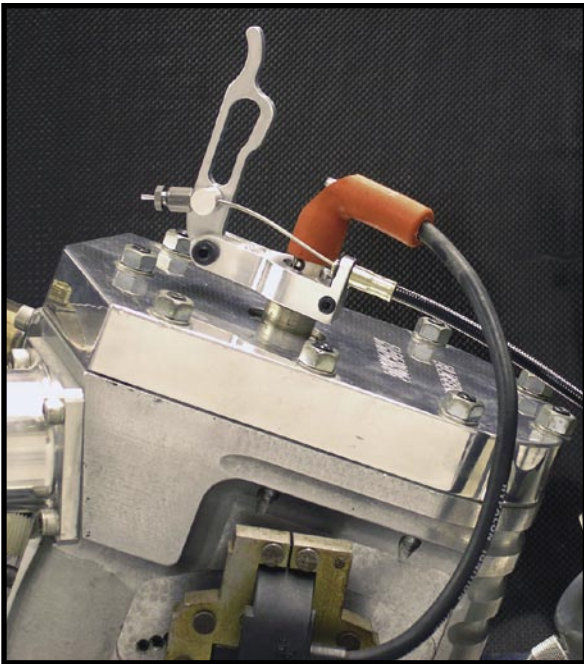

3. Install the switch by removing the plug wire and dropping the switch onto the hex on the plug. Make sure the switch is seated all the way down on the hex and tighten the clamp screw. Remove any plug boot you may be currently using and reattach the plug wire using the plug boot provided.

NOTE: When running a stock Briggs head, the fins under the shut off assembly may need to be clearanced to avoid interference with the smooth operation of the shut off.

CAUTION: MAKE SURE THE CUTOUT IN THE PLUG BOOT LINES UP WITH THE SWITCH ARM FOR PROPER OPERATION.

Please call Motivational Tubing at 316-283-7301 with any questions or comments.

THANK YOU FOR PURCHASING THE **M-T** EMERGENCY SHUT OFF SWITCH!

**Motivational
Tubing LLC**

316-283-7301
www.motivationaltubing.com